

RX2608 Receiver use explanation

1. Features of receiver RX 2608

- (1) Receiver RX2608 adopts 2.4G spread spectrum technology with the functions of automatic scanning, code pairing and LED receiving indication.
- (2) The usage of high performance receiver dramatically reduces the possibility of missing signal and ensures the accuracy and reliability of signal receiving.
- (3) With ID memory clearing function keys , appropriate to meet your operating habits.
- (4) Small size, light weight, structure is simple but reliable.



2. Function of receiver

S/N	Name for short	Full name	Function
1	ELEV	Elevator servo	Connect to the elevator servo
2	AILE	Aileron servo	Connect to the aileron servo
3	THRO	Throttle	Connect to the Electronic Speed Controller
4	RUDD	Rudder servo	Connect to the gyro
5	AUX1	Aux channel	Aux Channel 1, if helicopter, connect to pitch servo
6	AUX2	Aux channel 2	Aux Channel 2
7	CLEAN	CLEAN	ID memory clearing (with WK-2801PRO transmitter)

3. Matters needing attention

- (1) Status of LED indicator of receiver: quick flash means the signal is being received; solid lighting means the signal has been received; slow flash means no signal has been received.
- (2) All the signal wires should be connected in a correct way. Misconnection will result in failure to receive signal, even damage to receiver.
- (3) Please strictly follow the sequence of "power on the transmitter first, then connect the battery". Turn on the transmitter, then connect the battery with receiver within 10 seconds, the red light on receiver begins flash. The red light will get a solid light 1-3 seconds, after the transmitter finishes pairing with receiver, the red light will flash again. If the red light get a solid light and a mechanical BEEP sound can be heard from the servo, it means the receiver have received the signal from the transmitter and their codes match successfully.
- (4) ID memory clearing:
Once receiver and WK-2801PRO transmitter paired code successful, receiver has locked ID.
If the receiver requires clearing ID memory, the way is :Press CLEAN key of receiver and connect a 5V power to any one channel of receiver at the same time. If receiver's indicator light flashes slowly, it means ID memory have been cleared.

Warm note: If receiver couldnot receive signal of transmitter during the first time use, Please clear ID memory of receiver.