
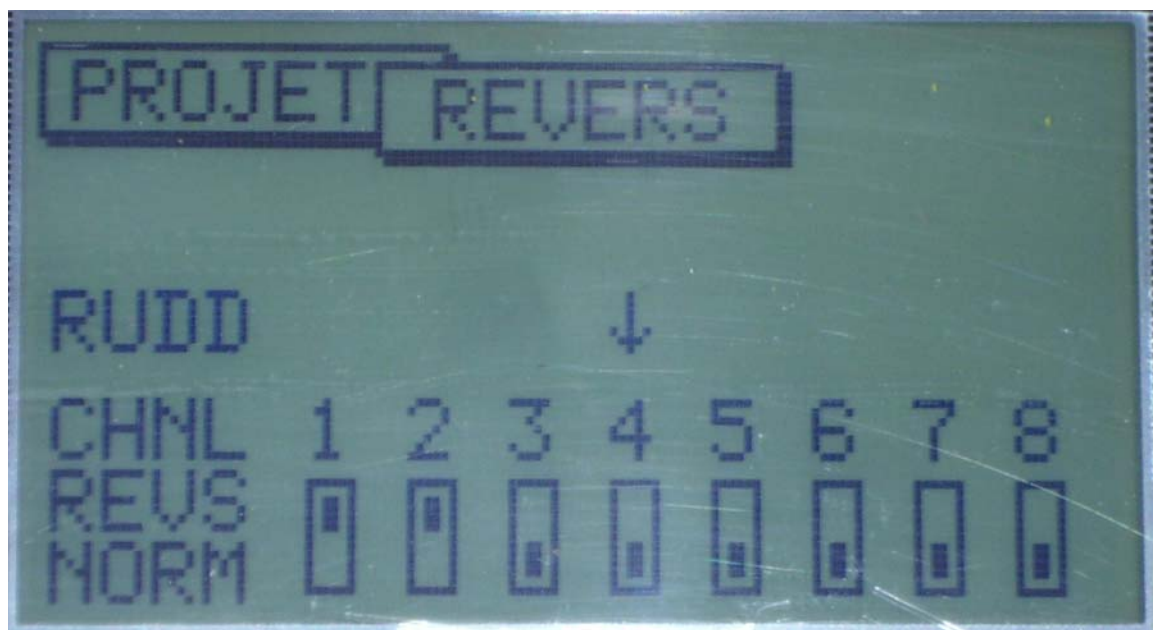


Sendereinstellungen PROJETI


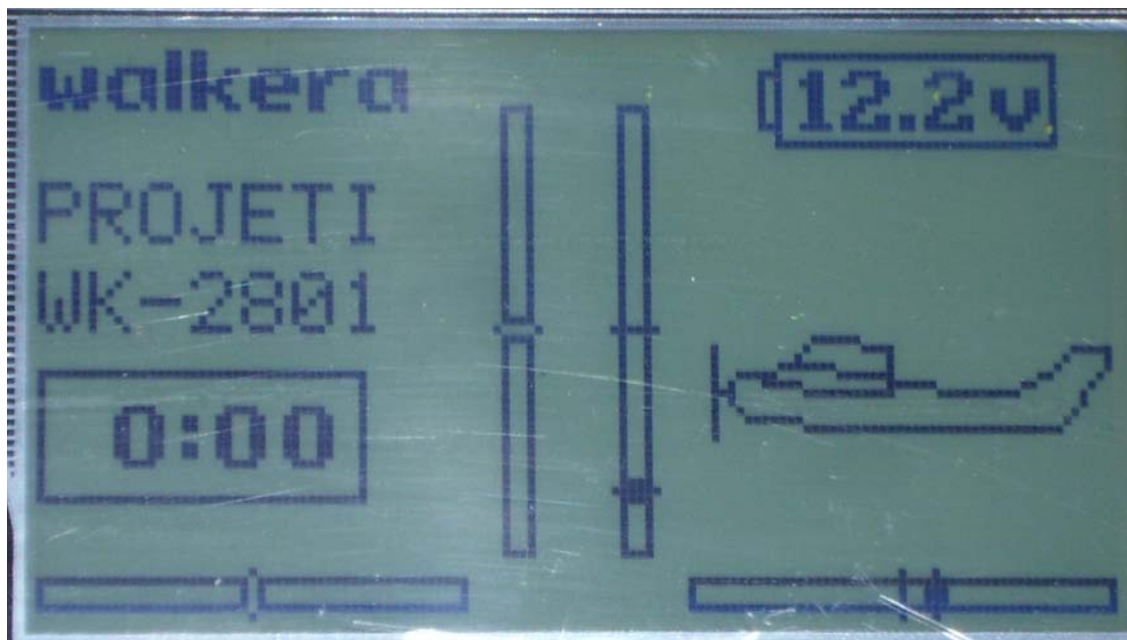


PROJET TRUADJ

→ ELEV D 75% U 75% ↓
AILE L 75% R 75%
THRO H100% L100%
RUDD L100% R100%

PROJET SUBTRM

→ ELEV	D	10	GEAR	0
AILE		0	FLAP	0
THRO		0	AUX2	0
RUDD		0	AUX3	0

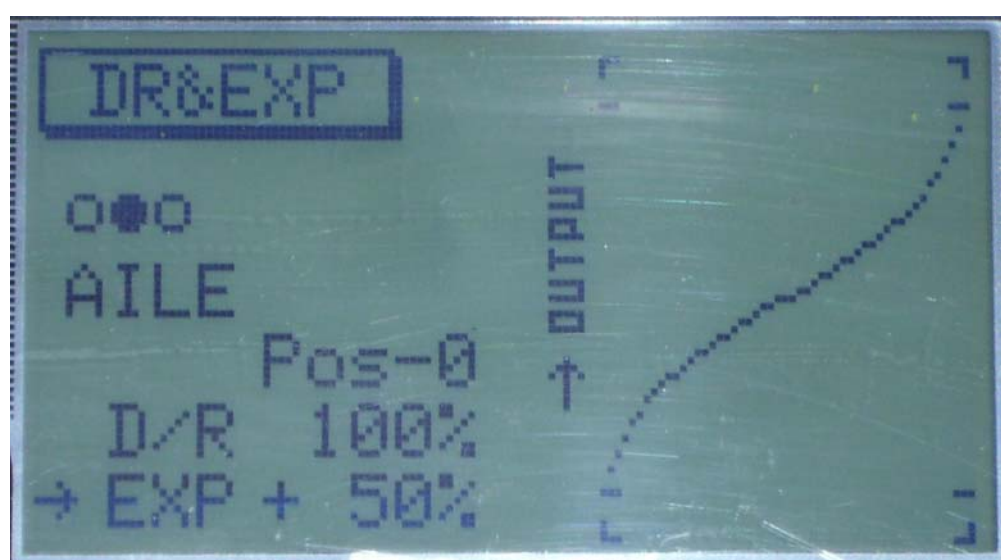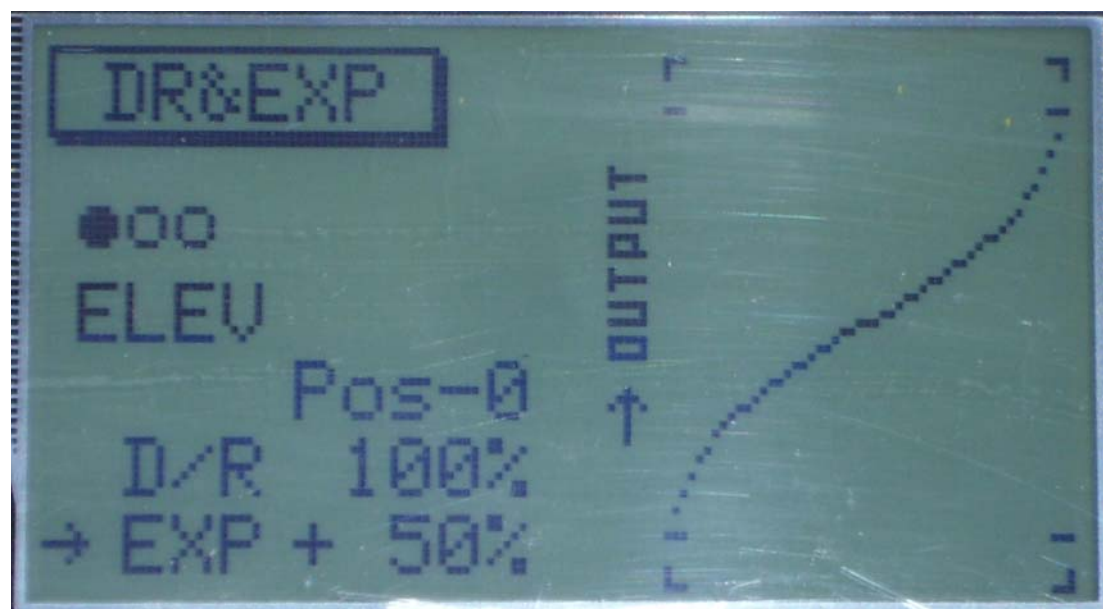

PROJET FLAPSYS

AUTO	INH	MIDL
< FLAP >		< ELEV >
→ NORM	0%	NORM U 36
MIDL	0%	MIDL 0
LAND	0%	LAND 0

INPUT

→ GEAR :	GEAR
AUX2 :	AUX2
AUX3 :	F. MOD
FLAP :	FLAPSYS

WING

FLAPERON	OFF
V-TAIL	OFF
→ DELTA	ON

ALARM

→ TIMER	5:30	<PROJETI>
BATTY	10.50	
BUZER	100	
ACT		